


# 14x28 Foundation Plan

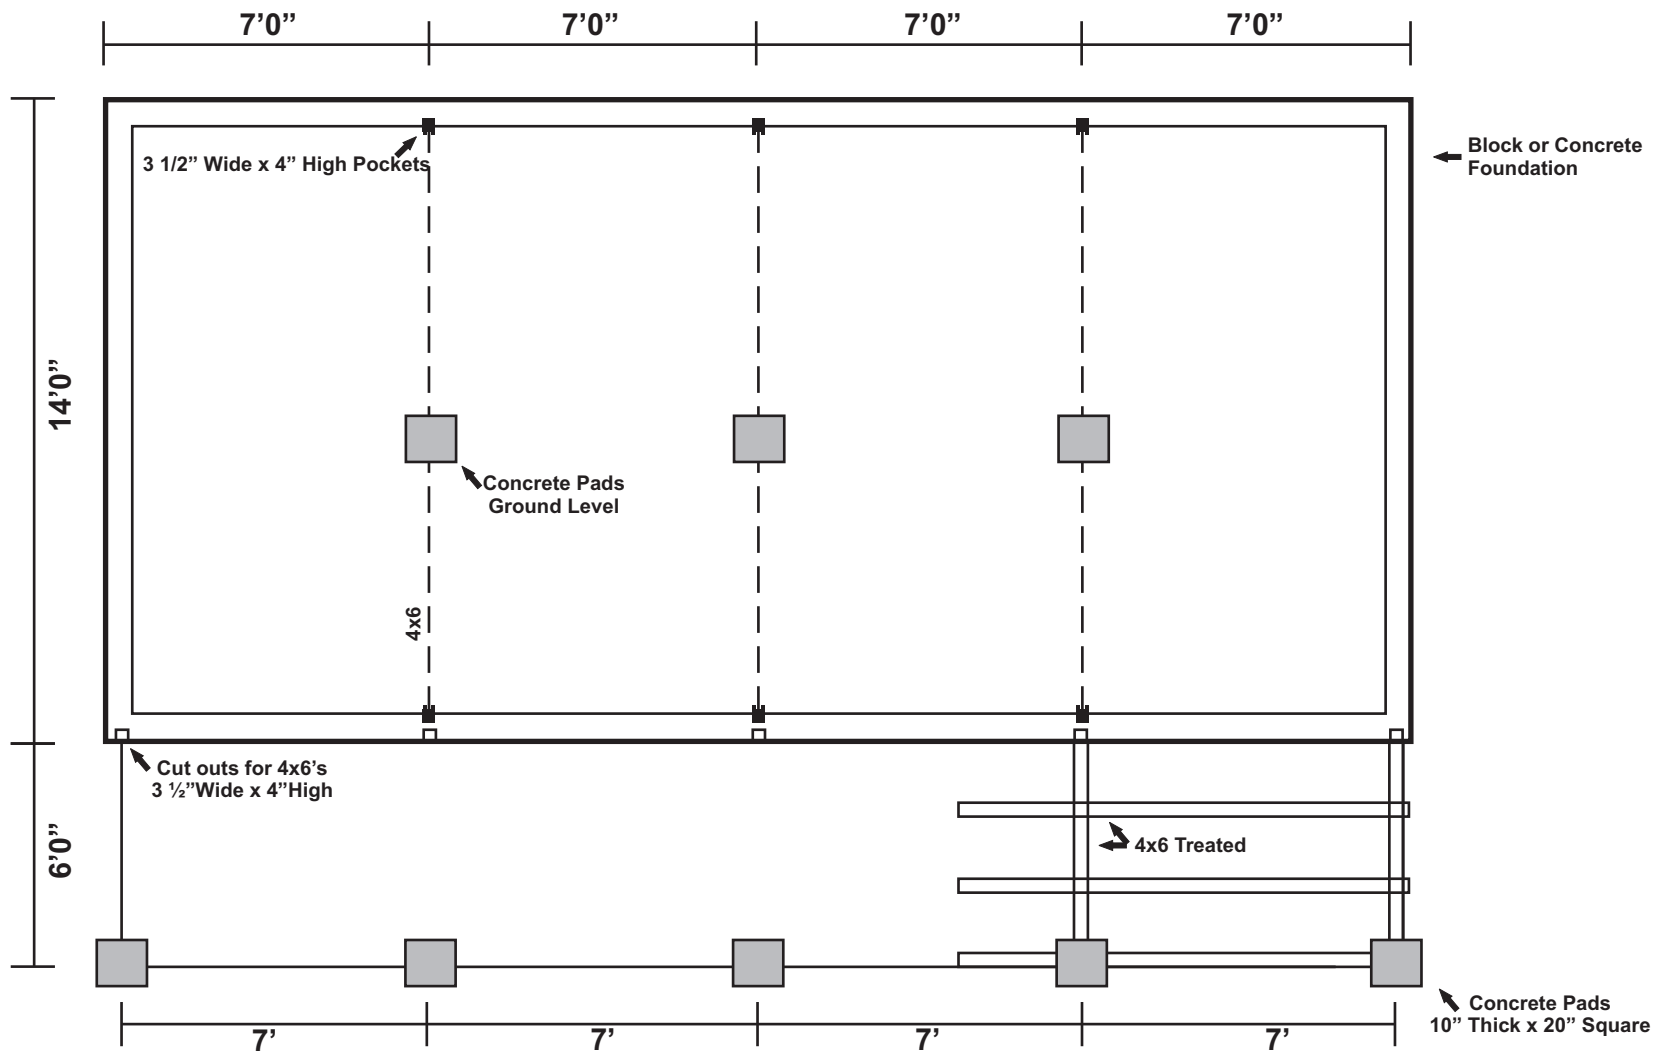

Concrete block foundation can be no more than 4 block high

Concrete pads ground level down center

Foundation should have anchor bolts - 2 at each corner and 1 every 6'

Anchor bolts can stick up no more than 1 1/2", so the cabin can slide across the 2x6 treated plates

Foundation should have pockets for the 4x6 beams so they can sit flush with the treated plates